

Written By: Grant Doerksen




INTRODUCTION

Guide to removing and replacing the battery on your Lenovo laptop.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-

Step 1 — Back Cover

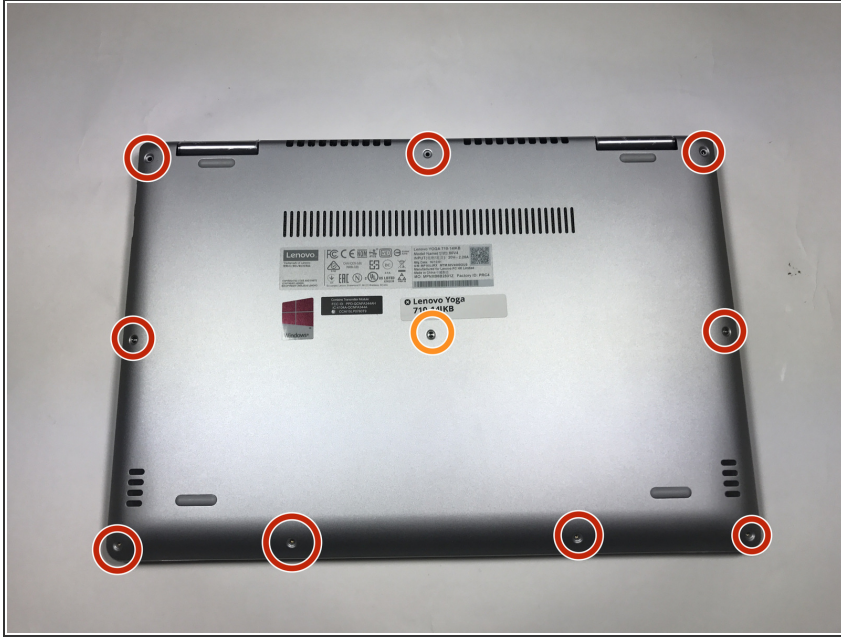

- Use a Torx T4 screwdriver to unscrew the 9 5mm screws holding the cover in place.
- Use a Torx T4 screwdriver to unscrew the 8mm screw in the center.
- ☑ When reassembling, make sure not to tighten the screws too much or you may risk cracking the plastic cover.

Step 2

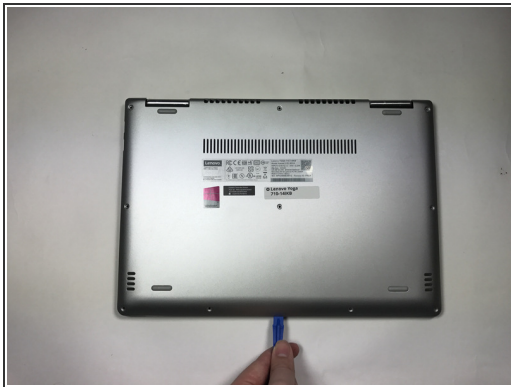

- Use the plastic opening tool to pry the cover up and away from the laptop, starting at one end and working your way around the cover.

⚠ The cover is large and flat and made of thin plastic. It cracks easily, so make sure not to pry too hard.

Step 3 — Battery



- Use the Phillips #00 screwdriver to remove the four 3mm screws holding the battery in place.
- ⓘ Be careful not to cross-thread the screws. Also, don't let the screws fall down into the laptop case.

Step 4



- Use the blue plastic opening tool to disconnect the battery cable.
- ⚠ Make sure to apply pressure upward and try not to wiggle the connector from side to side, as this could damage the connector.

To reassemble your device, follow these instructions in reverse order.

